



# OFY

## User manual



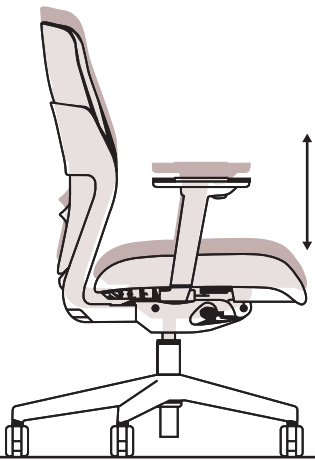


Seat height adjustment

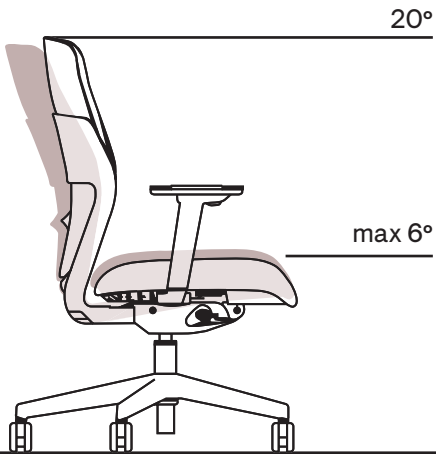


Backrest travel limited to 5 positions with back lock in the upright position



Seat depth adjustment

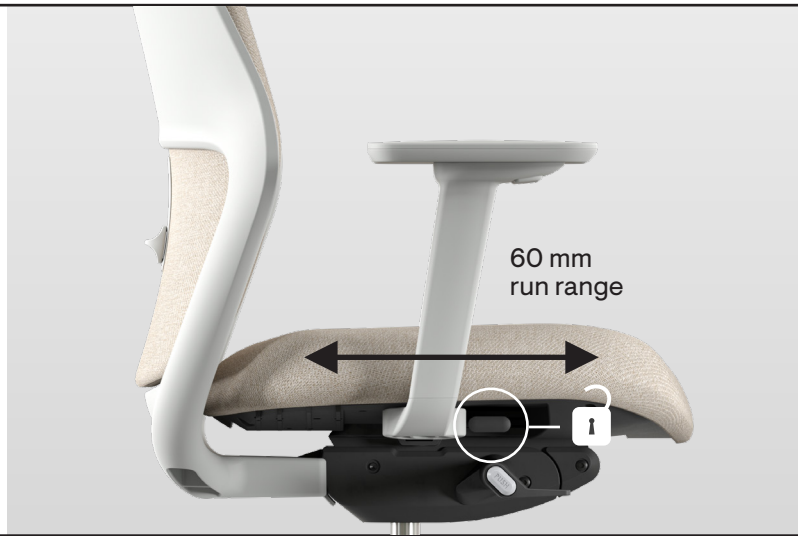

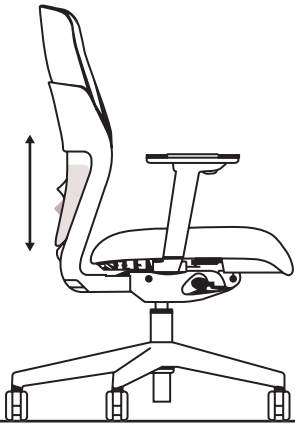

Height adjustable lumbar support




1D, 3D adjustable armrests

100 mm run range



Height adjustment at armrest carrier

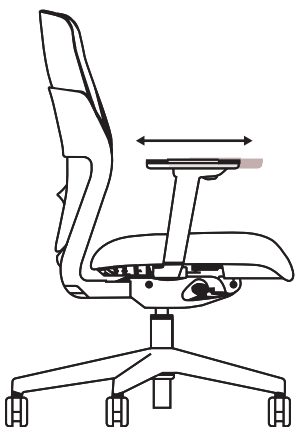


3D adjustable armrests

Pad adjustment forward and backwards




50 mm run range

1D (one direction) adjustable armrests  
3D (three directions) adjustable armrests

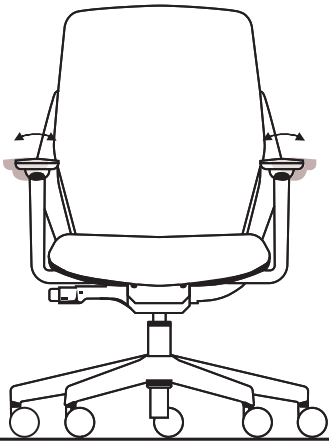

3D adjustable  
armrests

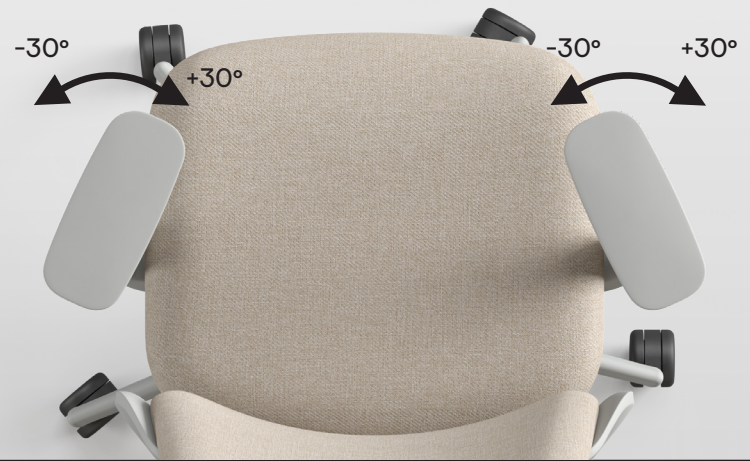

Pad rotation adjustment



Self-brake castors



for soft floor



for hard floor

Note. Self-braking chair castors initiate the integrated friction break and stop moving when the chair is unused (no weight is applied to the seat).

3D (three directions) adjustable armrests

## Other documents available for this product

Technical information for OFY chair family  
NARBUTAS product care guide