




# How to import a 3dm files into REVIT

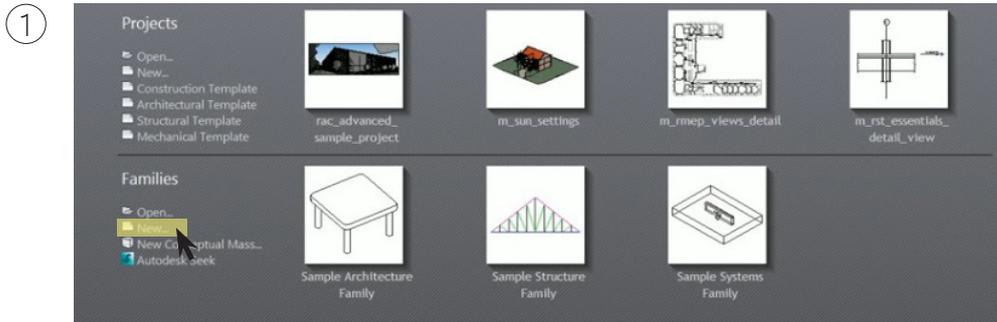


FAMILIES → NEW

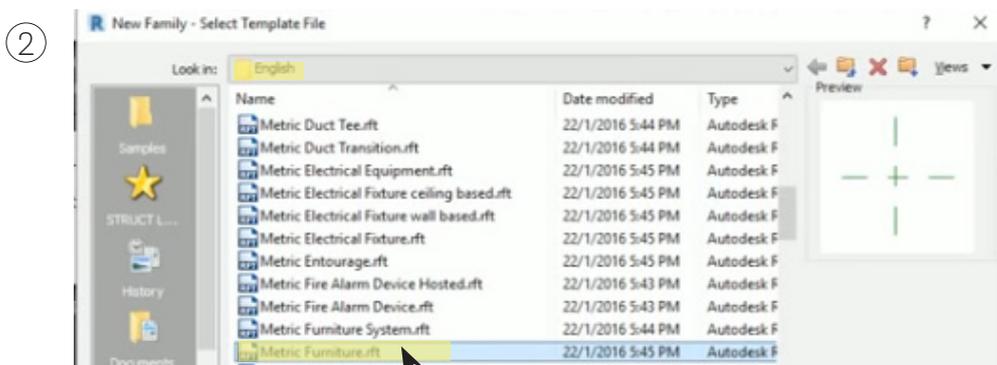

NEW FAMILY - SELECT TEMPLATE FILE → ENGLISH → METRIC FURNITURE.RFT

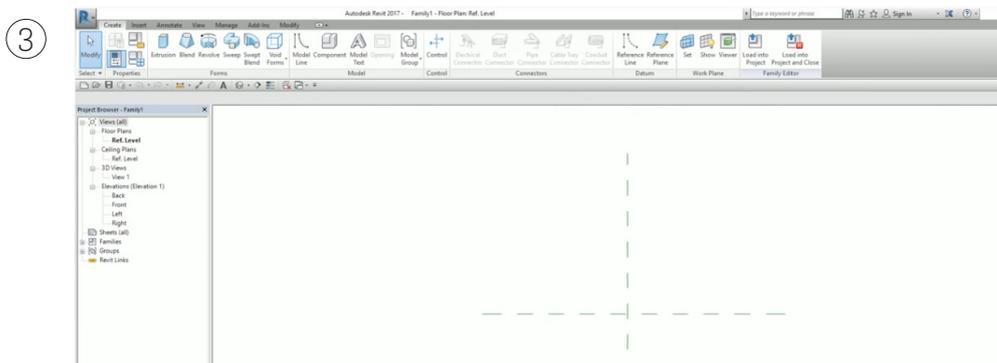

THIS SCREEN WILL OPEN

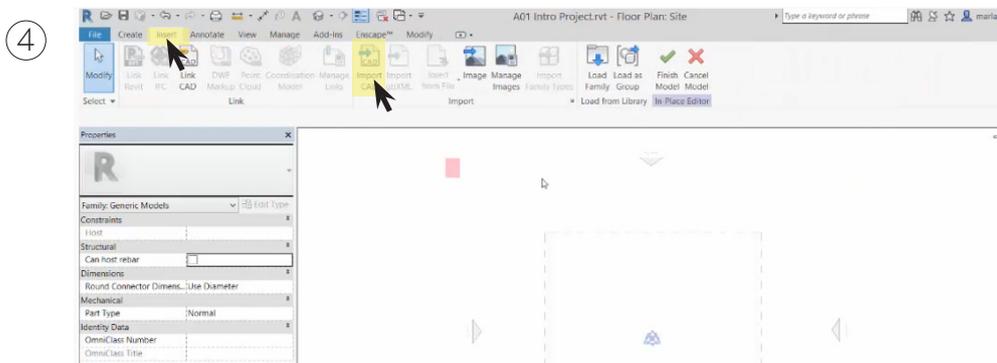

INSERT → IMPORT CAD → GO TO SELECT THE 3DM FILE → OPEN