

BOXI towers



FEATURES

- 2 widths 360 mm, 420 mm;
- 2 depths: 800 mm (for single desks), 820 mm (for bench desks); 3 heights: 740 mm, 1090 mm, 1200 mm;
- Different inner combinations.

QUALITY STANDARD

- EN 14073-2:2004
- EN 14073-3:2004
- EN 14074:2004



TECHNICAL INFORMATION

Carcass

- Made of 16 mm MFC (melamine) with 1 mm edging;
- Made of 18 mm MFC (melamine) with 1 mm edging;
- Made of 25 mm MFC (melamine) with 2 mm edging (only for H=740 mm top and H=1090 mm middle top).



Handle type (colour + handle code)

Pull-out drawer

- Made of 18 mm MFC (melamine) with 1 mm edging (except file tower, and towers which are 360 mm width, there are parts which are made of 16 mm MFC (melamine));
- Soft closing function;
- Lockable;
- Load max. 50 kg;
- Plastic pen holder is integrated in the upper shelf (TBR/ TBL201-202, TBR/TBL307-308).

Legs

- Four plastic height levelling feet, H=23 mm (+10 mm);
- 1 castor Ø80 mm (tread from thermoplastic rubber, non-marking).

Sliding doors (TBR/TBL303-304)

- Made of 10 mm plywood with laminate, edges lacquered;
- No handles (just cut-outs);
- White plastic slide profile.

Inner file drawers (TBR/TBL309-310)

- Made of 12 mm MFC (melamine) with 1 mm edging;
- Full extension ball bearing slides, which are visible;
- Height 280 mm, depth 350 mm, width 646 mm;
- Convenient opening without handles.





Inner personal drawers (TBR/TBL311-316)

- Made of 12 mm MFC (melamine) with 1 mm edging;
- Full extension ball bearing slides, which are visible;
- Height 120 mm, depth 300 mm, width 450 mm;
- Convenient opening without handles.



Fixed metal shelves (TBR/TBL309-316)

- Made of 1 mm thick steel sheet;
- Powder coated metal;
- Fixed with screws.

USB fast charger (TBR/TBL313-314)

- A+C Twin USB Fast Charger integrated into the back panel of the cabinet;
- Hardwired power cord to GST18-3 800 mm;
- Cable length: 3 m;
- Dimensions: Ø74x50 mm;
- Cable standard: UK, EU, CH, FR, US;
- R letter means that if the port is damaged, you can change it without replacing the whole socket:
- Black plastic.

Power socket (TBR/TBL315-316)

- 1 AC power socket 100 230 V;
- Hardwired power cord to GST18-3 800 mm;
- Cable length: 3 m;
- Dimensions: Ø74x50 mm, hole for socket Ø60 mm;
- Power socket standards: UK, EU, CH, FR, US:
- Black plastic.

Hook for clothes

- Dimensions: 20x28, H=62 mm;
- Powder coated metal:
- Fixed with screws.

Felt-lined inserts


- For towers with metal shelves;
- 2 sizes: 671x198x2 mm, 450x343x2 mm;
- Suitable with ERA, LUCIA, VELITO PRESTO, SYNERGY;
- Optional, need to be ordered separately.





RANGE


Towers*


*R/H or L/H option available




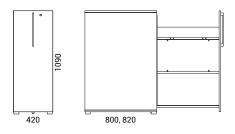

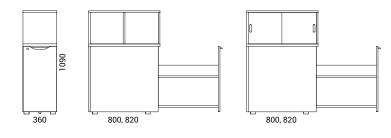

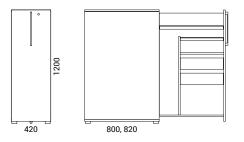

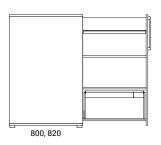


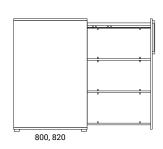





Planter Box



Optional










Drawer's box

Felt-lined inserts

Metal shelves (right / central)

Metal hook for clothes







Master key

Removal key

Cylinder lock with 2 keys



ADDITIONAL INFORMATION




 Bookcase or plant box fixing. For fixing bookcase or plant box onto the tower please use stickers and follow the assembly scheme (included in the package).





• Planter box care. Please note that the inner part of planter box is not protected from the moisture. We recommend you to use the Melamine Cleaning and Care Instructions.

 Changing tower sides. You can switch the inner wall side from R/H to L/H or vice versa for universal towers - TBU301-302 and towers assembled as R/H or L/H - TBR/ TBL201-202, TBR/TBL307-308. Please use the special fittings and follow the assembly scheme (included in the package).

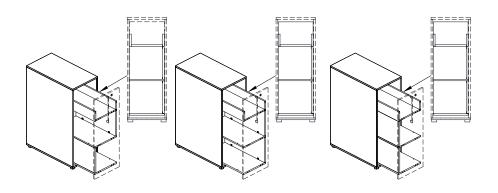

USB port/power socket cable management.

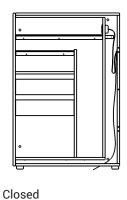

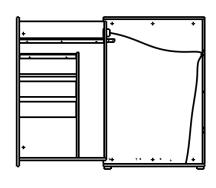

Open



Accessories fixing position

Fixing position of right metal shelf C0Z062



• TBR/TBL201-202



 TBR/TBL301-302 (suitable only for the upper shelve)



TBU301-302



TBR/TBL307-308*



• TBR309-310



• TBL309-310

Fixing position of central metal shelf C0Z063



• TBR/TBL201-202



TBU301-302



TBR/TBL307-308*



• TBR/TBL309-310

Fixing position of metal hook ZZZ061



TBR/TBL311-315

Fixing position of drawer's box ZTZ005



• TBR/TBL201-202



• TBR/TBL302, 304



TBU301-302

^{*} If you decide to switch sides from right or left, you will have to reassemble the shelves.

^{*} If you decide to switch sides from right or left, you will have to reassemble the shelves.